


Dräger X-plore[®] 2100 Half Mask

The Dräger X-plore® 2100 is the reusable alternative to disposable dust masks. The X-plore® 2100 is the ideal solution for people working frequently in dusty environments. Its replaceable filters provide protection against solid and liquid particles. This half mask offers the perfect combination of comfort, safety and cost-effectiveness.

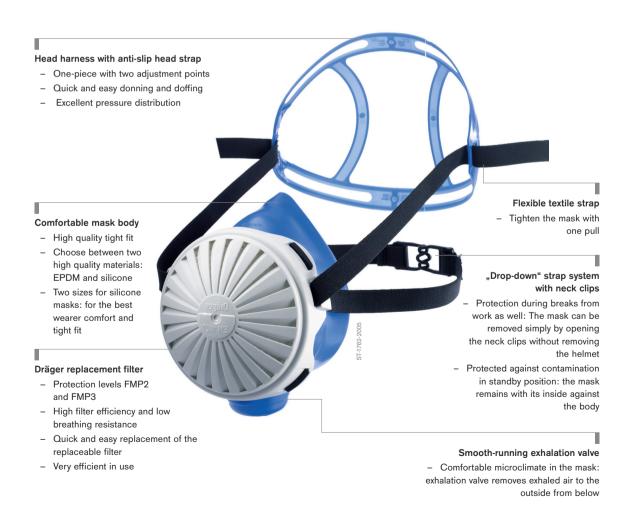

Benefits

Excellent tight fit

The mask body of the X-plore 2100 offers a first class tight fit with clearly reduced leakage figures compared to conventional filtering facepiece respirators.

High level of wearing comfort

Optimal wearing comfort is achieved by two available high quality materials, EPDM and silicone, in two sizes.

Comfortable Breathing Zone Climate

The exhalation valve is located at the lowest point in the mask, which helps to effectively remove exhaled moisture and perspiration.

"Drop down" harness

The mask can be removed from the face without removing head protection by simply unclasping the neck fastener. While in the drop-down position, the face-seal portion of the mask remains against the body therefore protecting against contamination.

Large-Capacity filters

During frequent and prolonged use in dusty environments the practical replaceable FMP2 and FMP3 filters protect with high filter performance and low respiratory resistance against solid and liquid particles/aerosols.

Very economical

The replaceable filters have a long service life. The easy to replace and low-cost filters make for an economic use.

Easy donning and doffing

The one-piece head harness with two adjustment points and anti-slip headgear ensure fast and trouble-free donning and doffing in addition to a very good pressure distribution.

Accessories



Particle filter 882 FMP2 RD

Order number: 67 37 352



Particle filter 882 FMP3 RD

Order number: 67 36 777

Related Products



Dräger X-plore® 1300

The Dräger X-plore® 1300 combines proven and reliable respiratory protection with intelligent new ideas ensuring a high level of comfort and ease of use.

Related Products



Dräger X-plore® 1700

Breathe cool, stay safe: Dräger X-plore[®] 1700 makes breathing easy and comfortable. The CoolSAFE[™] filter material ideally combines low breathing resistance and high filter performance in one mask. And the CoolMAX[™] valve efficiently releases humid and warm exhaled air to the outside. This makes breathing particularly easy and keeps you cool under the mask.

Technical Data

Mask body	Silicone (blue) or EPDM (black)	
Sizes	Dräger X-plore 2100 Silicone: small/medium (s/m) and medium/	
	large (m/l)	
	Dräger X-plore 2100 EPDM: universal size	
Filter connector	Plug-in connector for Dräger particle filters of type 882	
Weight	Approx. 110 g	
Head harness	Flexible textile strap with polypropylene harness, drop-down option	
Approvals	CE certified (EN 1827), NIOSH, AS/NZS	
Spare parts	Available	

Ordering Information

Mask		Order no.
Dräger X-plore 2100, EPDM	universal size	R 55 881
Dräger X-plore 2100, Silicone	medium/large (m/l)	R 55 882
	small/medium (s/m)	R 55 883
Filter		
Particle filter 882 FMP2 R D (EN 1827	pack of 25	67 37 352
and EN 143:2000)		
Particle filter 882 FMP3 R D (EN 1827	pack of 25	67 36 777
and EN 143:2000)		
Application sets for dusty workplaces		
Dräger X-plore 2100, EPDM	universal size with 5 filters FMP3 R D	R 55 910
Dräger X-plore 2100, silicone	size m/l with 5 filters FMP3 R D	R 55 915

Notes

CORPORATE HEADQUARTERS

Drägerwerk AG & Co. KGaA Moislinger Allee 53–55 23558 Lübeck, Germany www.draeger.com

Manufacturer:

Dräger Safety AG & Co. KGaA Revalstraße 1 23560 Lübeck, Germany

REGION EUROPE CENTRAL AND EUROPE NORTH

Dräger Safety AG & Co. KGaA Revalstraße 1 23560 Lübeck, Germany Tel +49 451 882 0 Fax +49 451 882 2080 info@draeger.com

REGION EUROPE SOUTH

Dräger Safety France SAS 25, rue Georges Besse 92182 Antony Cedex Tel +33 1 46 11 56 00 Fax +33 1 40 96 97 20 europe.south@draeger.com

REGION MIDDLE EAST, AFRICA

Dräger Safety AG & Co. KGaA Branch Office P.O. Box 505108 Dubai, United Arab Emirates Tel +971 4 4294 600 Fax +971 4 4294 699 contactuae@draeger.com

REGION ASIA PACIFIC

Draeger Safety Asia Pte Ltd 25 International Business Park #04-20/21 German Centre Singapore 609916 Tel +65 6308 9400 Fax +65 6308 9401 asia.pacific@draeger.com

REGION CENTRAL AND SOUTH AMERICA

Dräger Panama S. de R.L. Complejo Business Park, V tower, 10th floor Panama City Tel +507 377 9100 Fax +507 377 9130 contactcsa@draeger.com

Locate your Regional Sales Representative at: www.draeger.com/contact

